




Product: VE200 ANSI II Surveyor Safety Vest

HOW TO MEASURE

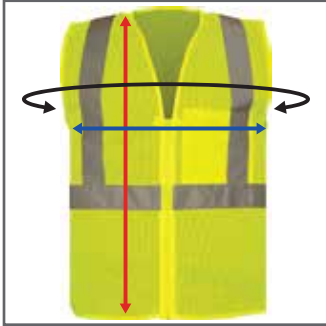

CHEST MEASUREMENT

On a person, measure just under the arms, across fullest part of chest, around entire body holding tape firm and level

BODY WIDTH

Lay garment flat 1 Inch below the armhole flat measure the garment across the chest.


BODY LENGTH

Lay garment flat (face down) Measure from center back neckline seam straight down to bottom of the front hem.


SIZE CHART

	S	M	L	XL	2XL	3XL	4XL	5XL
CHEST MEASUREMENT	21	22-1/2	24	25-1/2	27	28-1/2	30	31-1/2
BODY WIDTH	22-1/2	23	24	25-1/2	27	28-1/2	30	31-1/2
BODY LENGTH	25-1/2	28-1/4	28-1/4	28-1/2	28-3/4	28-3/4	28-3/4	29

Technical Data	
Material	Polyester
Main Fabric	110 Grams/Square Meter
Reflective Material	2" Silver Reflective Material Level 2
Ansi-107-2015 Class	ANSI Class 2
Color(s)	Lime & Orange
Size Range	Small - 5XLarge



R & R INDUSTRIES, INC.
1-800-234-5611
 ANSI/ISEA 107-2015
STYLE# VE200
SIZE:

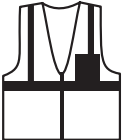


Type R
Class 2
Not FR

This garment is not flame resistant as defined by ANSI/ISEA 107-2015 Section 10.5.
RN# 73907

CARE INSTRUCTIONS

HAND WASH COLD
NO BLEACH, HANG TO DRY
DO NOT IRON, DO NOT DRY CLEAN
100% POLYESTER



MAX 25 WASHES

This garment is not designed to protect against severe heat/flame or hazardous materials. Do not wear garments with less visibility protection over this one. Periodic comparison to new garments are recommended to assure effectiveness. Do not store wet or exposed to sunlight.

MADE IN CHINA